

valspar®

# CHANGE IN A DAY



## HOW TO PAINT A WALL

Your walls are clean and smooth, floors and furniture are protected and your masking tape is up. It's time to paint!

### 1. Stir

Before you start painting, it's important to give your paint a good stir to get a nice and even consistency.

### 2. Cutting in

'Cutting in' is the process of applying paint to the corners and detailed edges of your wall, where rollers and wide brushes can't reach.

**TIP: Use a premium quality synthetic brush for a high quality finish!**

- Start by applying paint to the edges of the wall, working your way from one corner around the wall.
- Work quickly to maintain a wet edge and finish with long, gentle brush strokes. Don't apply too much paint and make sure you feather the edges for an even finish.

### 3. First coat - Paint & Primer


- Load paint evenly onto a good quality synthetic roller. Apply paint to the remainder of the wall and spread it out.

**TIP: Use a 10-12mm NAP synthetic roller to hold paint well.**

- Reload and repeat, painting a half to one metre wide sections at a time, until entire surface is evenly covered. Lay off with long gentle strokes from ceiling to floor. Leave to dry for approximately 2 hours.

### 4. Second coat

- Apply the second coat with the same technique used for first coat to complete your change in a day with a beautiful, rich, uniform finish.

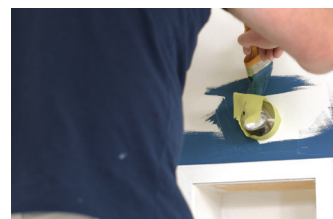

Valspar's Change in a Day shows how easy it can be to give any room in your house a refreshing new look.

Visit [changeinaday.nz](http://changeinaday.nz) to find out how you can make your own Change in a Day!

© Registered Trademark of Valspar Paint (NZ) Ltd

